


CER770 "CUBE"

Lavabo da appoggio su piano / Countertop mounted washbasin

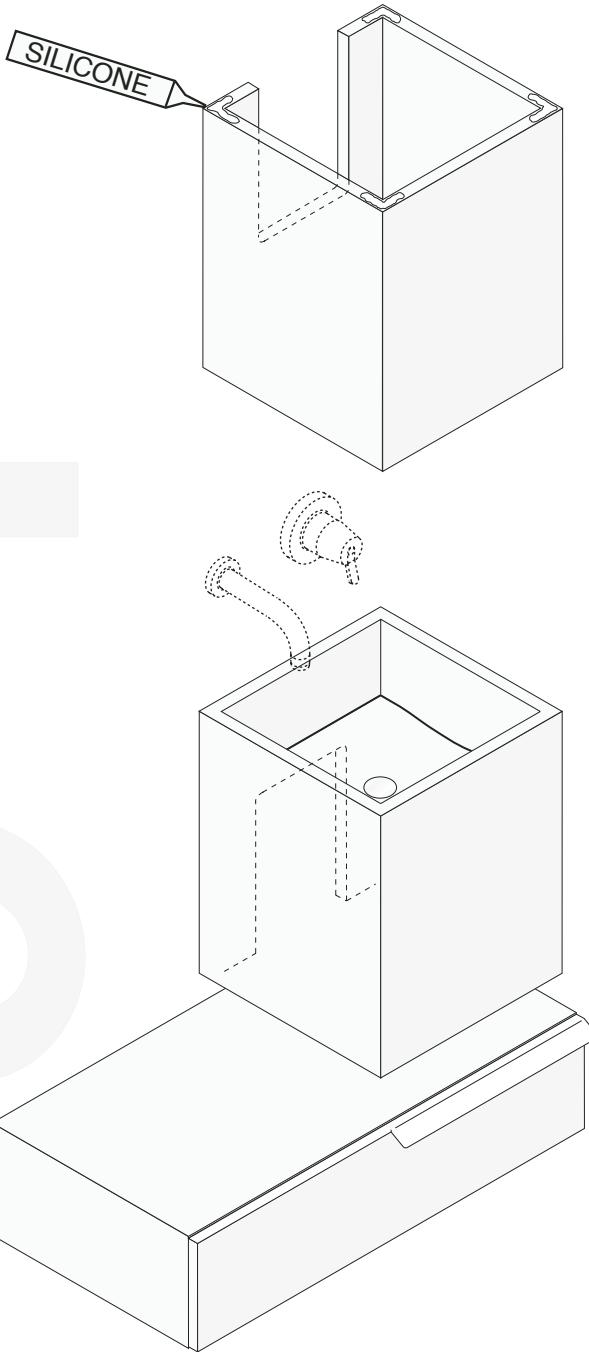

- 1) Pulire accuratamente le superfici su cui andrà posizionato il lavabo.
- 2) Applicare sui bordi inferiori, in corrispondenza degli spigoli, e sul lato posteriore del lavabo, un'adeguata quantità di sigillante siliconico per uso sanitario. Evitare di eccedere nella quantità di sigillante in modo da poter rimuovere il lavabo per un'eventuale manutenzione.
- 3) Procedere al collegamento del sifone con la piletta e con la rete di scarico. Il sifone resterà nascosto nel vano sottostante il bacino del lavabo.
- 4) Posizionare il lavabo sul piano facendo pressione in modo da far aderire bene la superficie. Lasciare asciugare il sigillante.

- 1) Carefully clean the surface on which the washbasin is to be mounted.
- 2) Apply sanitary quality silicon sealant to the underside of the washbasin (at the corners) and to the back panel. Use only a small amount of silicon to allow easier removal, for future maintenance access.
- 3) Connect the waste trap to the waste plug and the drainage pipe. The waste trap will be concealed in the space under the washbasin.
- 4) Place the washbasin on the countertop and press down, so that it fits the surface well. Allow the sealant to dry.