


# Programma FLAT XL Piani autoportanti sp.6 cm / Wall mounted countertops 6 cm thick



**ATTENZIONE:** assicurarsi che la parete sia portante; in caso di parete in mattoni forati adottare altri fissaggi specifici. Si sconsiglia il fissaggio su pareti in cartongesso.

- ① Sfilare la struttura composta dalla barra di fissaggio (A) e dalle staffe (B) posizionata all'interno del piano.  
*Remove the bracket support rail (A) and brackets (B) from the under of the countertop.*

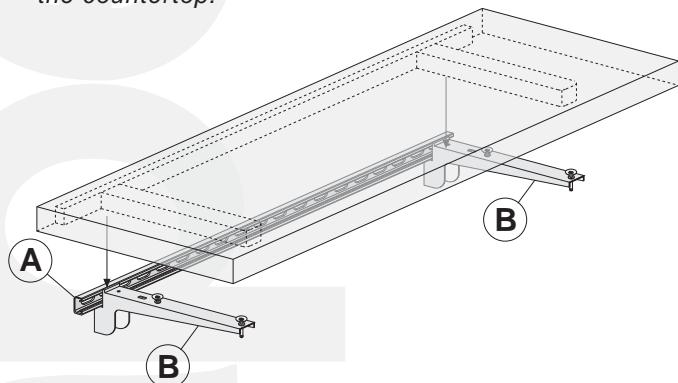

- ③ Se il piano è provvisto di struttura laterale procedere con il fissaggio della stessa, altrimenti passare direttamente al punto 4.  
*In the case of a countertop with sides, fix the sides first. Alternatively, proceed with point 4.*

- ③a **PIANI ROVERE, TEAK e PARAPAN:** accostare la struttura laterale al piano in corrispondenza dei fori e stringerla utilizzando l'eccentrico da inserire nel piano.  
**OAK, TEAK and PARAPAN COUNTERTOP:** place the sides against the countertop so that they coincide with the pre-drilled holes and fix using the eccentric cylinder seating previously inserted into the countertop.

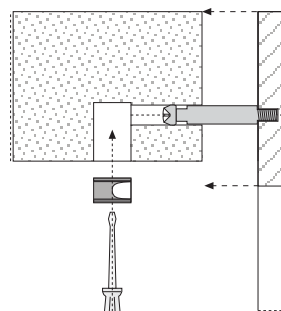
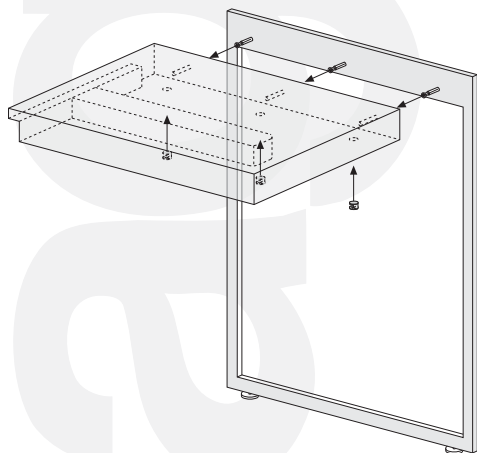


PARTICOLARE IN SEZIONE  
SECTION DETAIL



PORTATA NOMINALE 50 Kg (oltre il proprio peso)

**PAY ATTENTION:** verify that the wall is load-bearing. In case of a brick wall, employ other fixings. It is not recommended to fix the washbasin to plaster cardboard walls.

- ② Fissare la barra (A) alla parete. Per avere piani con filo superiore a cm 70, 76 o 85 (misura corrispondente all'altezza della struttura laterale), fissare la barra (A), per piani in rovere, teak o Parapan®, a cm 66, 72 o 81 e a cm 66,5, 72,5 o 81,5 per piani in Exmar. Posizionare i punti di fissaggio della barra (A) a parete in corrispondenza delle staffe (B).  
*Fix the bracket support rail (A) to the wall. For countertops with upper edge of 70, 76 or 85 cm (measure corresponding to the height of the lateral structure) fix the bar (A) for countertops in oak, teak or Parapan at a height of 66, 72 or 81 cm and at 66,5, 72,5 or 81,5 for countertops in Exmar. Position the wall fixings of the bracket support rail (A) to coincide with the brackets (B).*

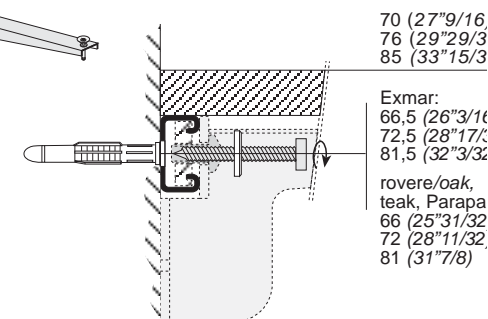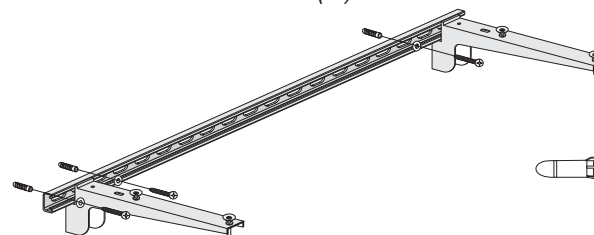

- ③b **PIANI EXMAR:** accostare la struttura laterale al piano in corrispondenza dei fori e fissarla utilizzando la ferramenta fornita dall'interno del piano.  
**EXMAR COUNTERTOP:** place the sides against the countertop so that they coincide with the pre-drilled holes and use the fixings supplied with the countertop to fix into position.

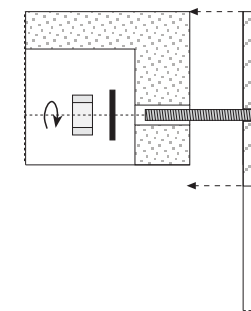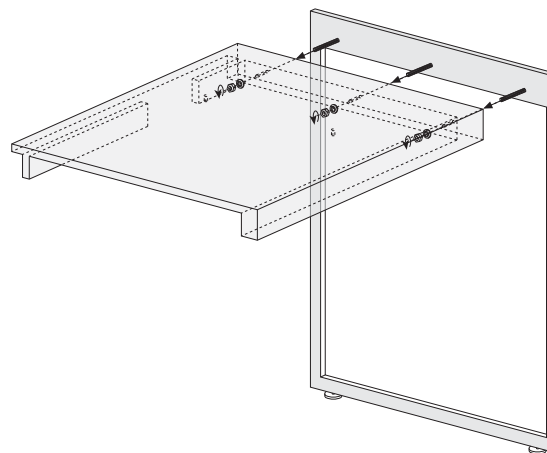


PARTICOLARE IN SEZIONE  
SECTION DETAIL


NOMINAL CARRYING CAPACITY 50 Kg (in addition to its own weight)

# Programma FLAT XL Piani autoportanti sp.6 cm / wall mounted countertops 6 cm thick


- 4** Stendere un velo di silicone sul bordo superiore della barra di fissaggio (A).  
*Apply a thin layer of silicone to the bracket support rail (A).*

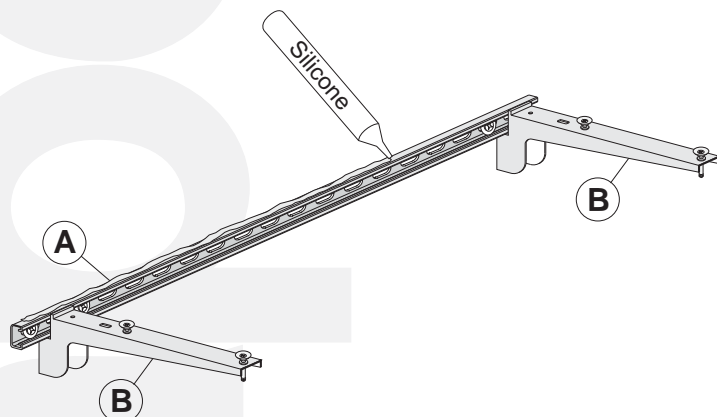


- 6** Procedere con la regolazione dell'orizzontalità del piano agendo sulle viti di regolazione (C). (durante il montaggio tenere le viti di regolazione (C) avvitate a fondo corsa per permettere la regolazione in un secondo tempo).  
*Adjust the countertop until it is level using the screws (C). (during assembly, make sure the adjustment screws are fully screwed in to allow maximum subsequent adjustment).*

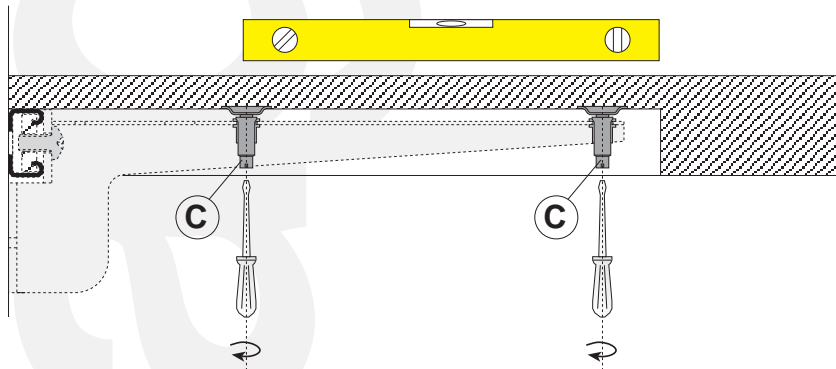


- 5** Appoggiare il piano sulla barra (A) e sulle staffe (B) accostandolo alla parete e procedere con il posizionamento del lavabo scelto (come indicato sulla scheda relativa al lavabo).  
*Place the countertop on the bracket support rail (A) and brackets (B) and push tightly against the wall, then position the washbasin selected (as indicated in the instructions for installing the washbasin).*

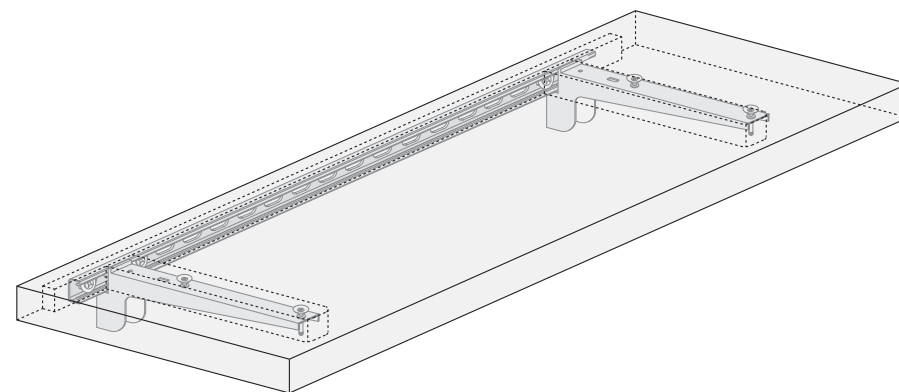

- 7** Fissare le staffe (B) al piano utilizzando le viti (1) avvitandole manualmente. Procedere poi con il fissaggio delle staffe (B) alla parete (2).  
*Fix the brackets (B) to the countertop using the screws (1) and screwing them manually. Then fix the brackets (B) to the wall (2).*

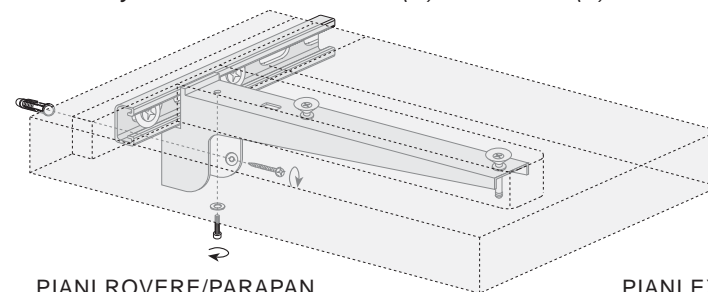

PIANI ROVERE/PARAPAN  
OAK/PARAPAN COUNTERTOP

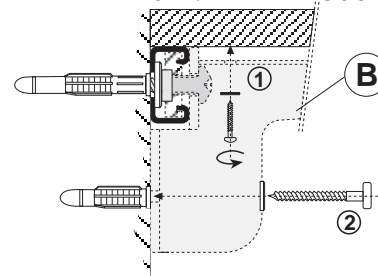

PIANI EXMAR  
EXMAR COUNTERTOP

